

Read these instructions completely before operating this system

PLEASE CHARGE THE BATTERY FIRST BEFORE USE!

Technical specifications

cam	nera				
	Color camera with sapphire glass lens				
	Wide viewing angle	120°			
	Illumination	12 white LEDs			
	Operating temperature	-20°F ~ 120°F (-28°C ~ 50°C)			
	Stainless steel house	Stainless steel 304			
	PAL output	720X576(PAL)			
	NTSC output	720X480(NTSC)			
	Waterproof	IP68			
cable					
	Special gold point touch connector to camera				
	Fiberglass cable				
monitor					
	7" TFT COLOR monitor	Picture Resolution:320 (TV Lines)			
	OSD display				
	Video output 1Vpp 75 Ohms				
power supply					
	Charge adaptor :110~240VAC ,12.6VDC /1000mA (included.)				
	Lithium battery box (2600mAh, included.)				
Dimensions					
	Case size	x x			
	Camera	x			

Save this Manual

Attention

- 1. Read the this manual carefully before using this system.
- 2. Avoid using the device in extreme cold, heat, or humidity, it may damage the device.
- 3. Do not drop or press hard on the device.
- 4. Do not disconnect the unit while recording or playing. It may damage the unit and/or the SD device.


Applications

FOR PIPE DIAMETERS FROM 1inch TO 12 inches


- 1. WATER SUPPLY
- 2. WASTE WATER
- 3. HVAC SYSTEMS
- 4. SWIMMING POOLS
- 5. SPAS
- 6. PLUMBING LINES
- 7. VACCUM SYSTEMS


Camera

- 1. WHITE LEDS
- 2. LENS
- 3. SPRING
- 4. CONNECTER

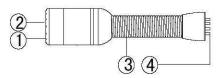


Know Your Tool

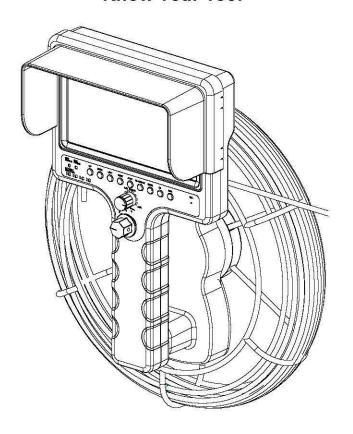


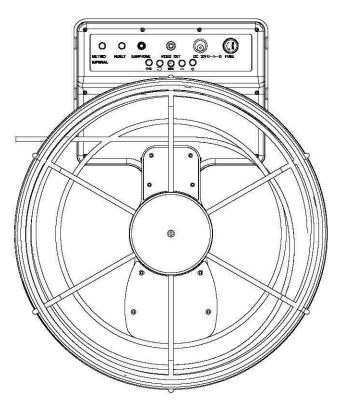

Monitor

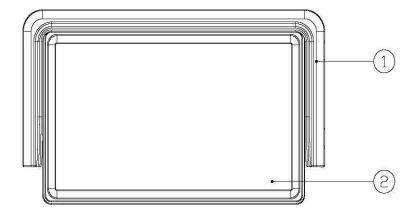


- 1. sunshade
- 2. 7"monitor

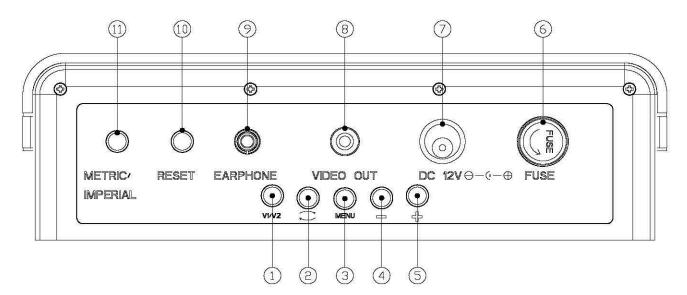

- 1. Video1 video2 selector button
- 2. Image UP and down left and right button
- 3. Menu button (include bright contrast color langue 16:9 4:3 sleep)
- 4. Sub menu down selector
- 5. Sub menu up selector
- 6. Fuse socket
- 7. Charge adaptor jack
- 8. Video output jack
- 9. Earphone jack
- 10.Count button- reset
- 11. Count button- metric/imperial


Control part

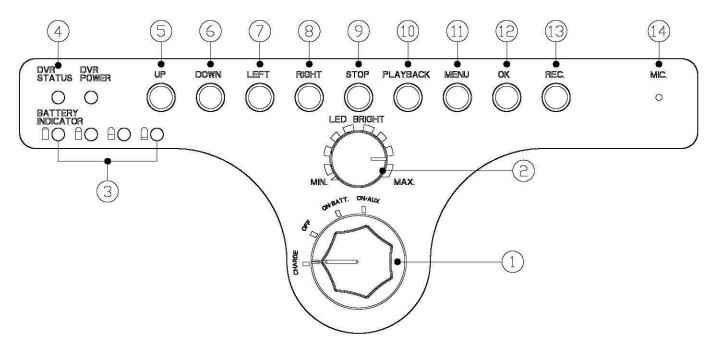

- 1.Switch
- 3. Battery level indicator
- 5. DVR up selector button
- 7. DVR left selector button
- 9. DVR stop selector button
- 11. DVR menu set button
- 13.DVR record/stop button


- 2. led bright adjust knob
- 4. DVR LED
- 6. DVR down selector button
- 8. DVR right selector button
- 10. DVR playback button
- 12. DVR ok button
- 14. Mic.hole

SKID ASSEMBLE

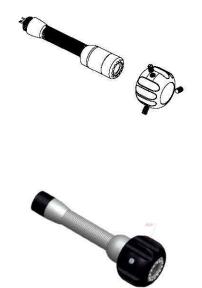



Keys on DVR

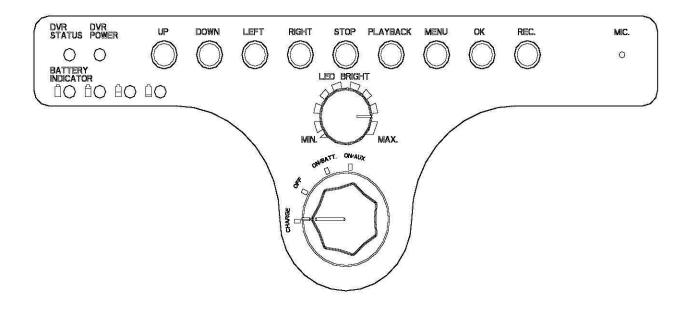

Up	Move up		
Down	Move down		
Left	Move left		
Right	Move right		
OK	Confirm		
Power	Power indicator		
Status	Recoding working indicator		
Playback	Playback video files		
Stop	Stop play and back		
menu	Enter to menu		
Rec.	Manual start/stop recording		

lcons on screen








Press "menu" key enter into main menu.

Recorder setting

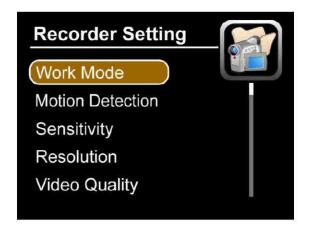

1. Work Mode

Video Record videos by manualPhoto Snapshot photo by manualAudio Record audio by manual

2. Motion Detection

Off stop the motion Detection
On start the motion Detection

3. Sensitivity

High the full area will be detected Medium the 1/2 area will be detected low the 1/4 area will be detected

4. Resolution

720x576

720x480

640x480

5. Video Quality


High: high resolution **Medium:** Standard resolution

Low: low resolution

6. Time stamp

Off Time stamp will not be shown on the screen

On Time stamp will be shown on the screen

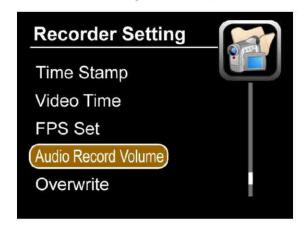

7. Video time

It can choose the video file length.

5 Min 5 minutes recorded video

10 Min

15 Min

30 Min

60 Min

8. Fps set

15 Fps 1 second 15 Fps picture 30 Fps 1 second 30 Fps picture

Audio record volume
 Work with audio record mode
 level can be adjust


10. Overwrite

Off the recording will stop when the disk full.

On the recording will overwrite the old video files when the disk is full.



Press "menu" key enter into main menu to select the systems setting

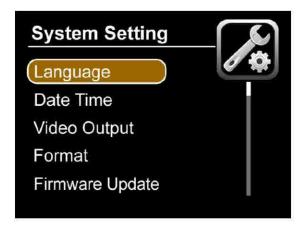

1. Language

English (English only)

2. Date time

Choose Date Time press "OK" to confirm. Press" \leftarrow , \rightarrow "key to choose items. Press" \uparrow , \downarrow " to set.

3. Video output

It can choose PAL or NTSC mode to fit your Monitor and TV Video output.

4. Format

No the system will not format the SD card.

Yes the system will format the SD card. (caution: PLS backup the data of the SD card before operated


5. Firmware Update

No. the system will not be updated

Yes. the system will be updated

6. Memory info

All: The SD full capacity
Free: The SD free capacity

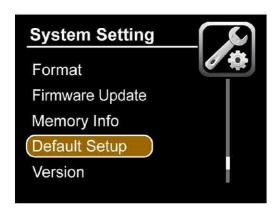

7. Default Setup

No customer set Yes factory set

8. Version

Booc.12.11.05 (soft Version)

Press "menu" key enter into main menu to select the playback setting



Event playback



Video files
 Photo files
 Audio files
 All files
 All the file inside of the SD card

Delete files

1 Press "Playback" key to find the files .Press "menu" to Choose the file you want to delete ,one and all, and then press "OK" to delete it.

Specifications

	D1: 720X576	
Resolution	High Resolution:720x480	
	High Resolution:640x480	
Compression format	M-JEPG & Standard JPEG	
Video files format	AVI	
Working mode	Recording/snap photo/ audio recording	
Memory	SD/SDHC card≤32GB	
Power	DC12V	
Working electricity	≤200Ma	
Working temperature	-10℃~+50℃	
Working humidity	20%~85%	

Basic operation

- 1. IMPORTANT: When connecting the camera to the Monitor the power must be off.
- 2. Screw the camera to the reel cable connect the reel to the Monitor (See Figure 1-B).make sure the camera lens is clean.
- Press the switch on the monitor and DVR will work after five seconds.
 Gently insert the camera into a pipe duct, etc and reel out the cable until it is at the desired depth.

IMPORTANT: Avoid kinking the fiberglass cable as this will cause irreversible damage. Do not bend under sharp angles and do not twist the cable.

NEVER use the camera and/or cable as an unclogging tool.

4. adjust the led bright knob to suitable position .

Press the **MENU** button to enter the setup of the monitor. Move through the setup page using the select button and adjust the values with the **UP** and **DOWN** buttons. Press and hold the **UP** and **DOWN** buttons to increase

setting speed. Following values can be set between 0 and 100: bright-contrast- color –languge-6:9 - 4:3-sleep)

- 5. To view the images on another screen (not incl.) connect that screen with a video cable (not incl.) to the VIDEO OUTPUT on the control box.
- 6. After use, switch the power off, carefully retract the camera from the inspection area. Clean the cable and wind it back on the reel. Disconnect all cables and place the protective caps back on the connectors. Make sure the camera and cables are clean and dry before storing them back in the case. Use a clean, soft and dry cloth to clean it.
- Storage and cleaning
- Always return the equipment back to its protective case when not in use.
- Do not close the case with wet equipment inside as this will increase the risk of mold
- Clean the rest of the equipment with a clean dry cloth. Never use solvents or abrasive solutions.


Fuse

- 1. The fuse and fuse cap on battery box are not assembled during shipping, please relocate the fuse with cap to the fuse holder first before use.
- 2. If the status LEDS on the control box don't light up after switching on the battery box, check the fuse.
- Turn the fuse cap counter clockwise to remove it from the battery box.
- Only replace the fuse with a new one with the same specifications as the original one (F2A250V).

Charge the battery

- 1) If the status LEDS on the battery box in lower level, charge the battery. Insert the charge adaptor cord into the battery charge jack.(**Figure 2**)
- 2) Switch to the charge position on control box.
- 3) Charge LED will be red during charging and turn to green when finish charging (normal charging time 6-7 hours).

Figure 2

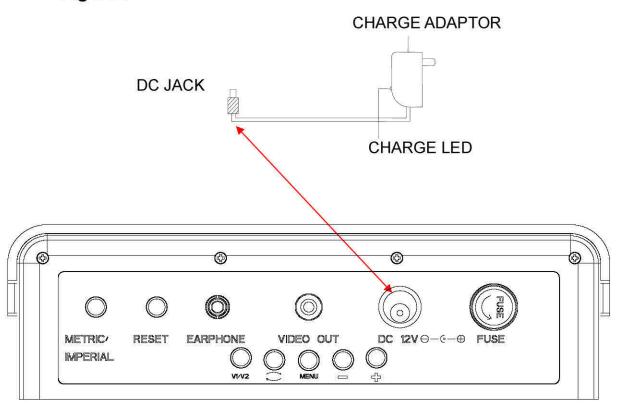

4) Battery specifications:

1.	TOTAL POWER	14W	
2.	LITHIUM BATTERY	12VDC N	MAX.≦ 40Wh
3.	CHARGER	12.6V	1A
4.	CHARGE TIME	5	HOURS
5.	WORK TIME	≥210	MINUTES
6.	PROTECTIVE VOLTAGE	9 V	
7.	7. THE VOLTAGE BEFOR DISCHARGING 12.6V		
8.	LOAD CURRENT	600mA	(INPUT 12.2V HOUR)

Assembly drawing and parts list

Part No.	Description	
1	STAINLESS STEEL CAMERA	
2	TFT COLOR MONITOR WITH DVR	
3	CABLE WITH WHEEL	
4	CHARGE ADAPTOR	
5	AL□ ABS□ CASE	
6	SUNSHADE	
7	SKID1	
8	SKID2	
9	CUSTOMER MANUAL	
10	SCREW DRIVER	
11	MICROPHONE	