



LEAKTRONICS


ELECTRONIC LEAK DETECTION EQUIPMENT

818-436-2953 | info@leaktronics.com | www.leaktronics.com

The HydroStick Instructions Manual

Directions For Use

The HydroStick is a unique standalone amplifier that is used in combination with its accessories to find hidden or subterranean leaks. Having a small, sturdy aluminum body with a single-handed push to listen button, the HydroStick allows the user to listen for pool plumbing leaks wherever they occur.

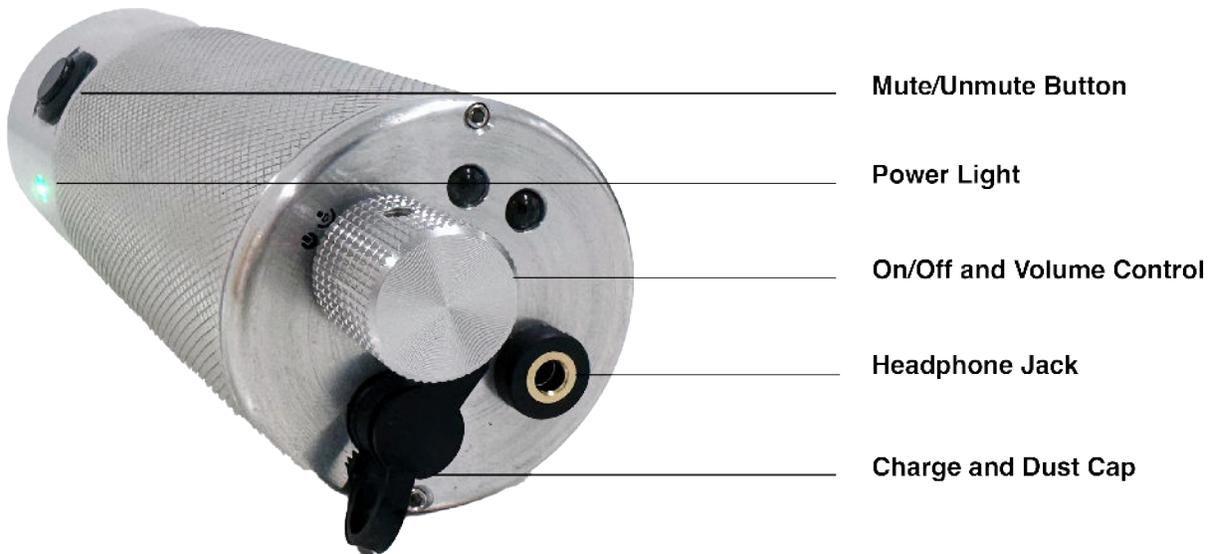



LEAKTRONICS

ELECTRONIC LEAK DETECTION EQUIPMENT

Instructions Manual

PowerOn/Off and Volume Control

The knob on top of the handle serves as the on/off switch and volume control. Turn the knob clockwise to switch the power on. A green light in the middle of the side handle will indicate that the power is on.

The black button located next to the green light is to unmute the device. Press and hold the black button with your thumb to listen. When detecting leaks, hold down the mute button continuously. When the leak is located, release the button. The sound will then stop. Exercise caution when adjusting the volume control. Always start with low volume and work your way up to higher volume. Avoid using the maximum volume unless necessary.

Charging the HydroStick

Utilize the provided 5V charger and cable. Remove the dust cap and plug the USB cable into the wall charger. Then connect the cable end to the HydroStick charge plug located in the handle. Charge the HydroStick for a minimum of 2 hours. While charging, the indicator light on top of the handle will turn red. When fully charged, the indicator light will turn green. Both lights are positioned on top of the handle. Once charged, the HydroStick is ready for use.

Maintaining the HydroStick Red Head Combo Kit

We recommend using a rag and WD-40 to wipe down the HydroStick and the Red Head hydrophone cables once a month to keep them clean and in good condition. Although the HydroStick is water-resistant, it is not waterproof and not intended to be submerged in water. Take special precautions when using it.

Connecting the Headphones

Use the headphones included with The HydroStick. Plug the headphones into the headphone jack located on the bottom of the handle.

Please follow these instructions carefully to ensure proper assembly, charging, and usage of The HydroStick. If you have any further questions or concerns, feel free to contact our customer support at 818-436-2953 or info@leaktronics.com.